

SETDSPAC(a)

SETDSPAC(a)

NAME

setdspac — set user-supervisor d-space bits

SYNOPSIS

(setdspac = 45.)
setdspac(dspacbits)
int dspacbits;

DESCRIPTION

Setdspac sets the d-space bits for user and supervisor address spaces according to *dspacbits*. Bit 0 = 1 turns on user d-space and bit 1 = 1 turns on supervisor d-space.

SEE ALSO

DIAGNOSTICS